



WARNING: Before attempting to install or maintain this red dot sight, assure that your weapon is unloaded and the weapon safety is in the "safe" position.

INSTALLING THE BATTERY

- Turn battery cap counter-clockwise to remove.
- Insert the CR2032 battery with the positive (+) side up.
- Tighten battery cap by hand, or using a coin. Do not overtighten.

MOUNTING THE SIGHT

- Loosen the mounting bolt, using the included torx wrench.
- Install the sight to the weapon rail by tightening the mounting bolt. Be sure the bolt is positioned in a rail slot for proper fit.
- To avoid overtightening, tighten the screw until you meet light resistance, and then tighten another ½ to ¾ turn (12 to 15 inch-lbs of torque).
- If you plan to leave the sight mounted permanently, we recommend using Blue Loctite on the mounting screw.

OPERATION & ZEROING



Operation: Turn the rotary knob to activate the sight and adjust the brightness. Settings 1 and 2 are for night vision, 3 through 11 are for regular conditions. The sight will automatically shut off after 15 minutes if left still, and will "Shake Awake" automatically once moved.

Windage adjustment: Turn side turret counter-clockwise to move point of impact right, clockwise to move point of impact left.

Elevation adjustment: Turn top turret counter-clockwise to move point of impact up, clockwise to move point of impact down.

Zeroing: The ALPHA is adjusted at ½ MOA increments (1/2 inch at 100 yards). We recommend a 50 yard zero for this product, and to confirm zero at 200 yards. But you can use whatever distance suits your application best.

1. Turn on the sight and adjust for ambient conditions
2. Set up a target at 50 yards, and fire 3 shots on center.
3. Find the center of your points of impact and adjust point of impact for windage and elevation with a suitable tool (the end of a spent casing will do). At 50 yards, each "click" of adjustment will move the point of impact by roughly 1/4". So if your point of impact is 1" low, you would adjust elevation "up" by 4 clicks.
4. Repeat steps 2 and 3 until your point of aim and point of impact are the same. Do not continue to adjust windage and elevation mechanisms if you encounter excessive resistance – this can damage the sight.
5. Verify that your sight is still mounted securely to your weapon after zeroing.

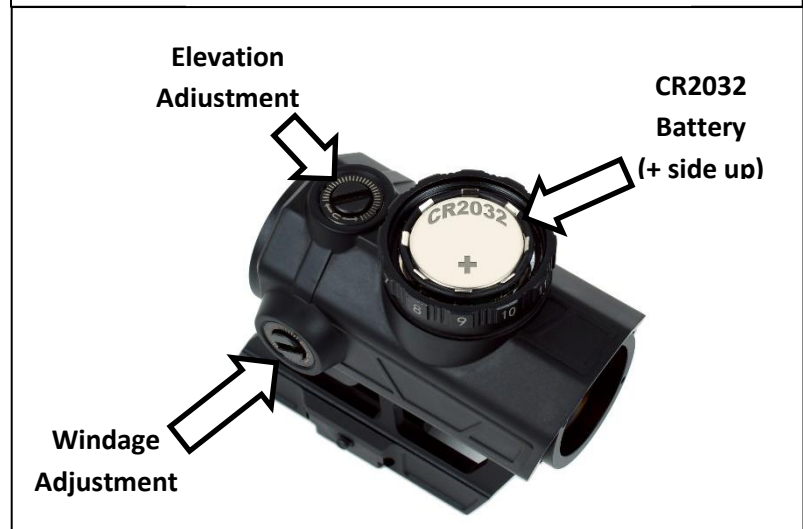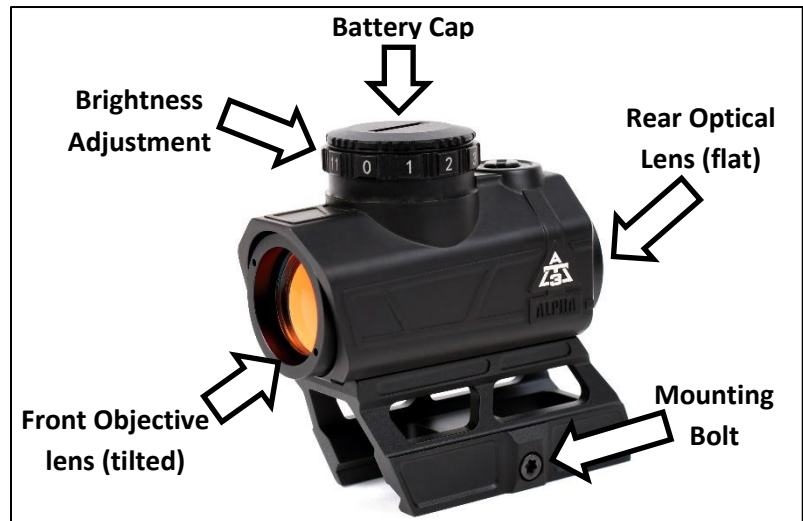

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- Immediately dispose of used batteries and keep away from children. Do **NOT** dispose of batteries in household trash.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.

